


# D8H



# Kombodom

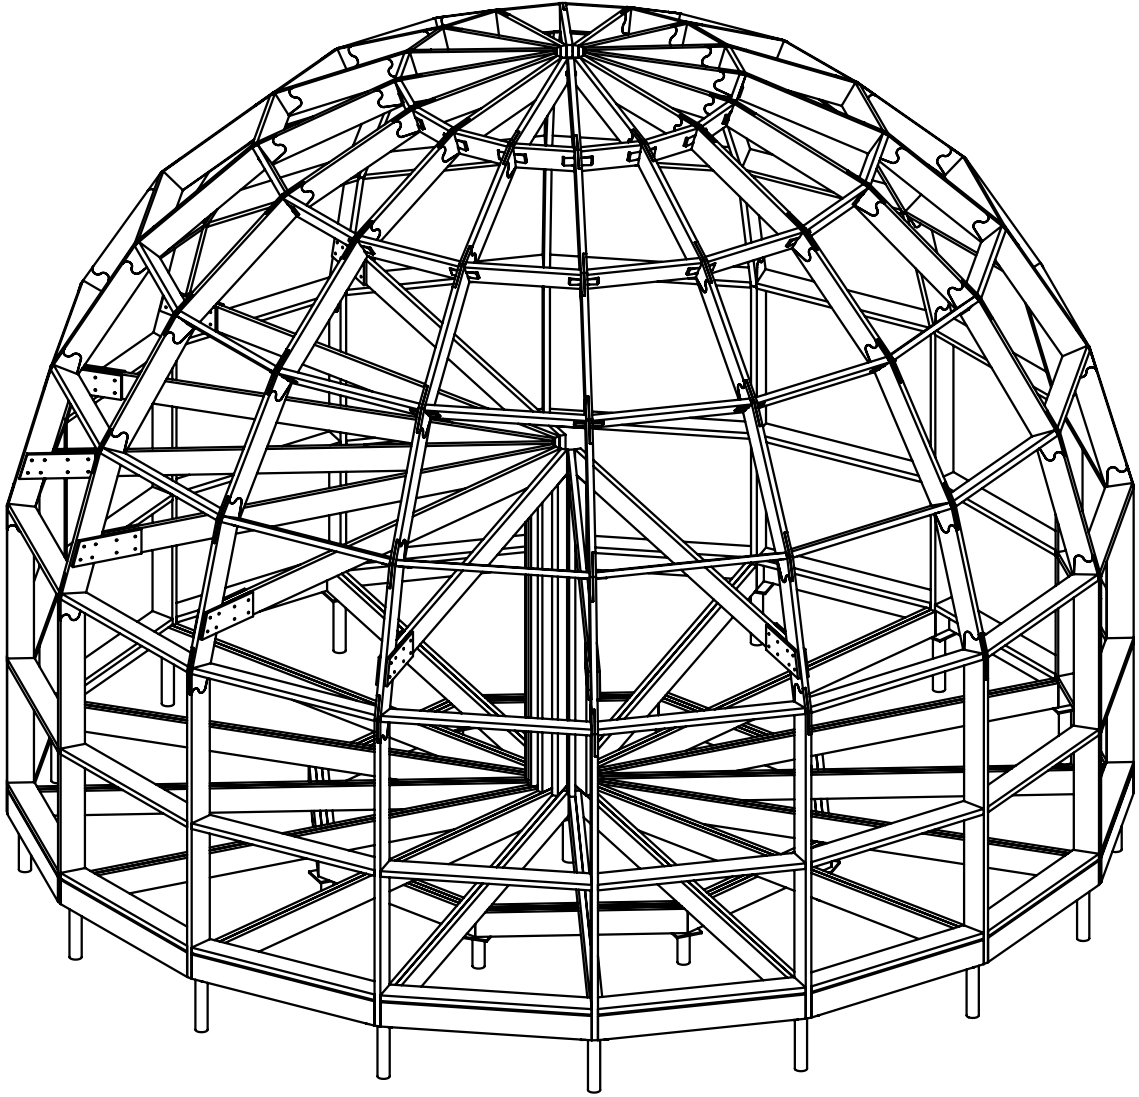

Attention! Please be sure to read this section before assembly!

Before proceeding with the assembly of the frame, prepare sawn OSB elements, screws, a screwdriver and drills for pre-drilling under self-tapping screws. You will need all these items during assembly.

During assembly, be sure to fix the frame, securing the cladding on each assembled horizontal tier. The cladding, sawn exactly in size, is also a template for precise positioning of beams and the braces of the frame for correct convergence in the upper anchorage.

The frame must be fixed to the foundation.



### IMPORTANT!

**Never pick assemble the next horizontal tier of the frame, without securing the covering sections of the previous tier! Remember that this can lead to collapse of the frame, serious injuries and even death. Strictly adhere to the assembly instructions!**

For work at a height, use only specialized auxiliary equipment. Be sure to use a construction helmet, insurance and assistants. If you are not sure of your abilities, recruit specialists for installation.

#### Important notes

The assembly set is made of solid wood from coniferous trees - a living, natural material. The presence of irregularities, knots, roughness and cracks in the frame elements is acceptable - this does not constitute a material defect and does not affect the strength or durability of the construction.


#### Features of storage and the maintenance


The assembly set should be used for its intended purpose as a skeleton for a dome house, which is lined with boards from the outside and covered with tiles. It is recommended to cover all wooden frame elements with a protective formulation, selected according to the prevailing future operating conditions.


You should keep the construction set in a cool dry place, protected from direct sunlight and precipitation, ensuring free circulation of air around the elements, away from heat sources, high humidity and extraneous odors.


#### The guarantee


The manufacturer sets a warranty period of one year for the assembly set. At the same time, the change in the physical parameters of the wooden elements arising from improper storage or use is not covered by warranty.


B1  16 pcs

B2  64 pcs


B3  16 pcs

R1  32 pcs

R2  16 pcs

R3  16 pcs


R4  16 pcs


R5  16 pcs

R6  16 pcs

D  1 pcs

N  112 pcs



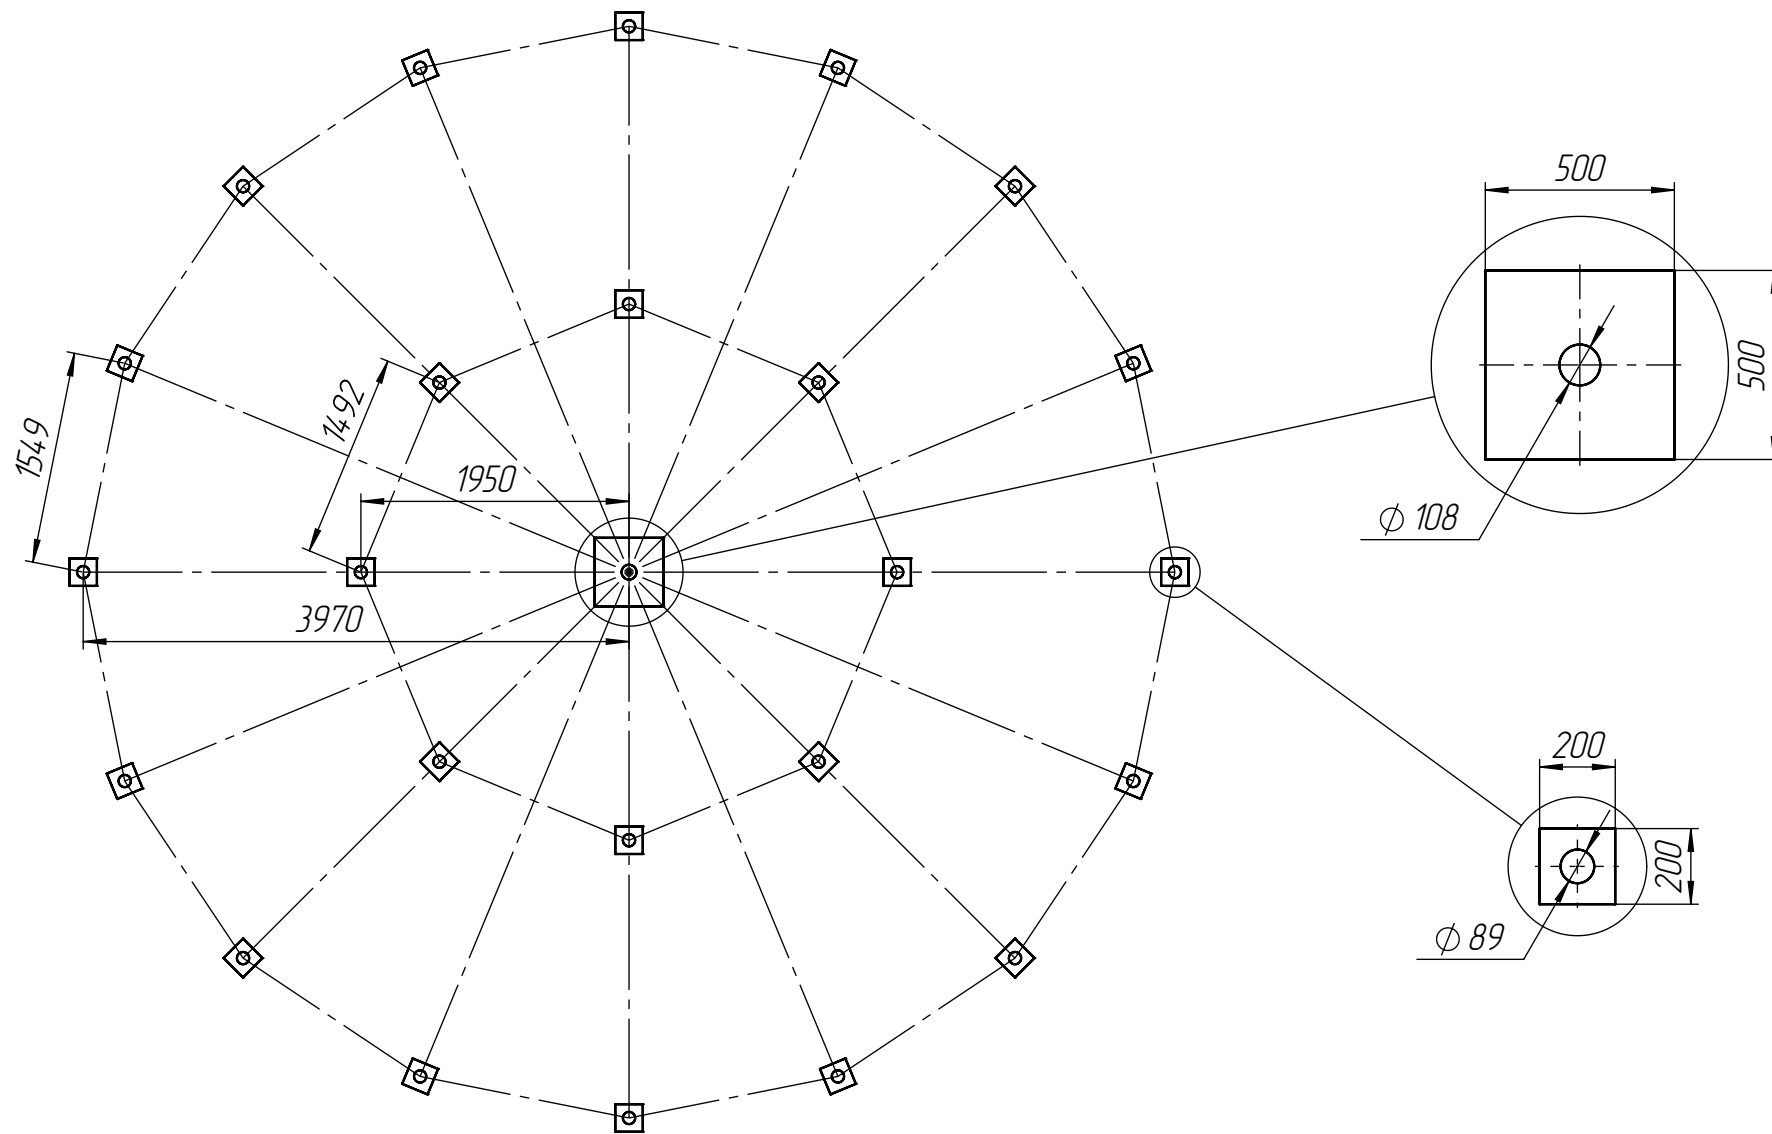


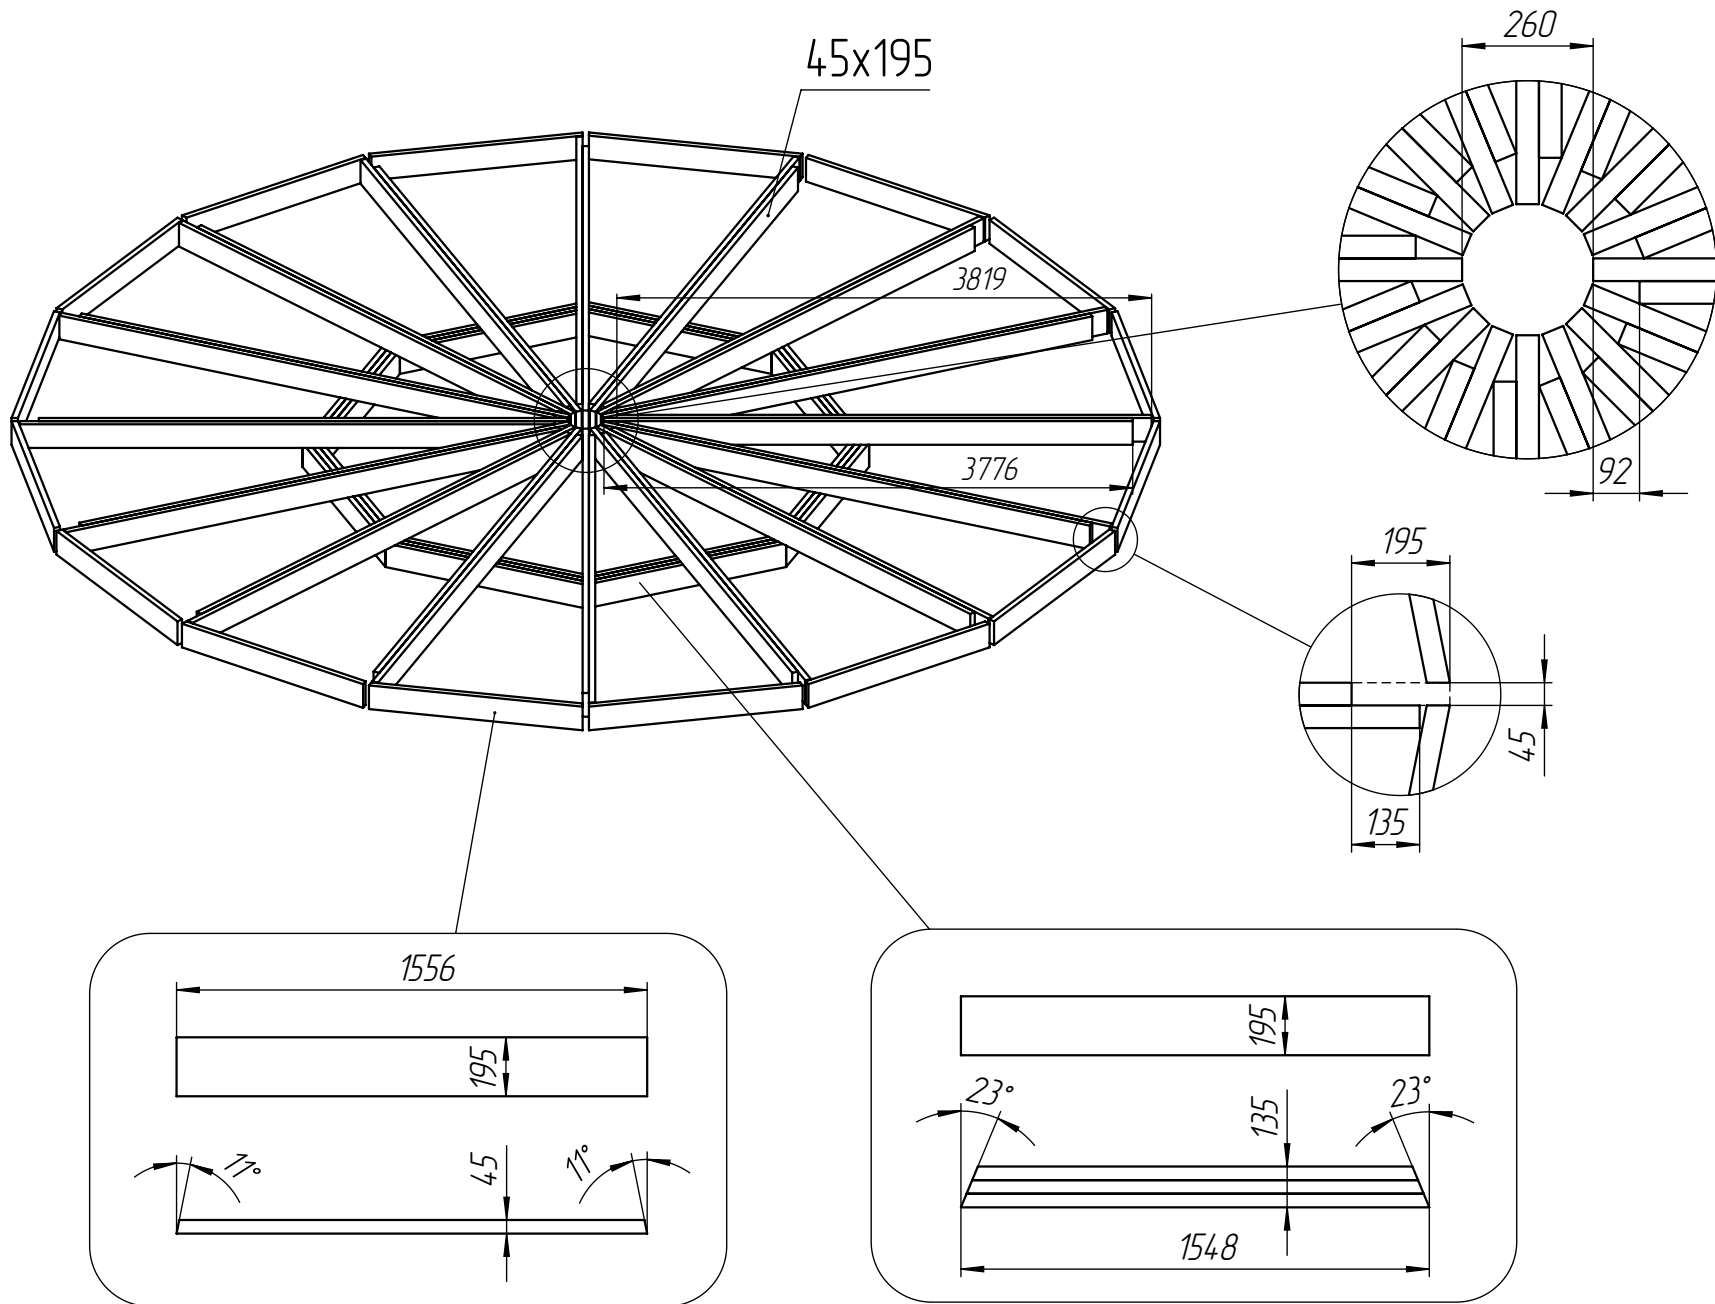


Washer 12  
DIN 9021



Nut M12  
DIN 934

M12

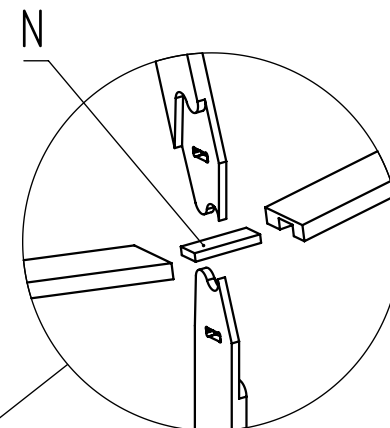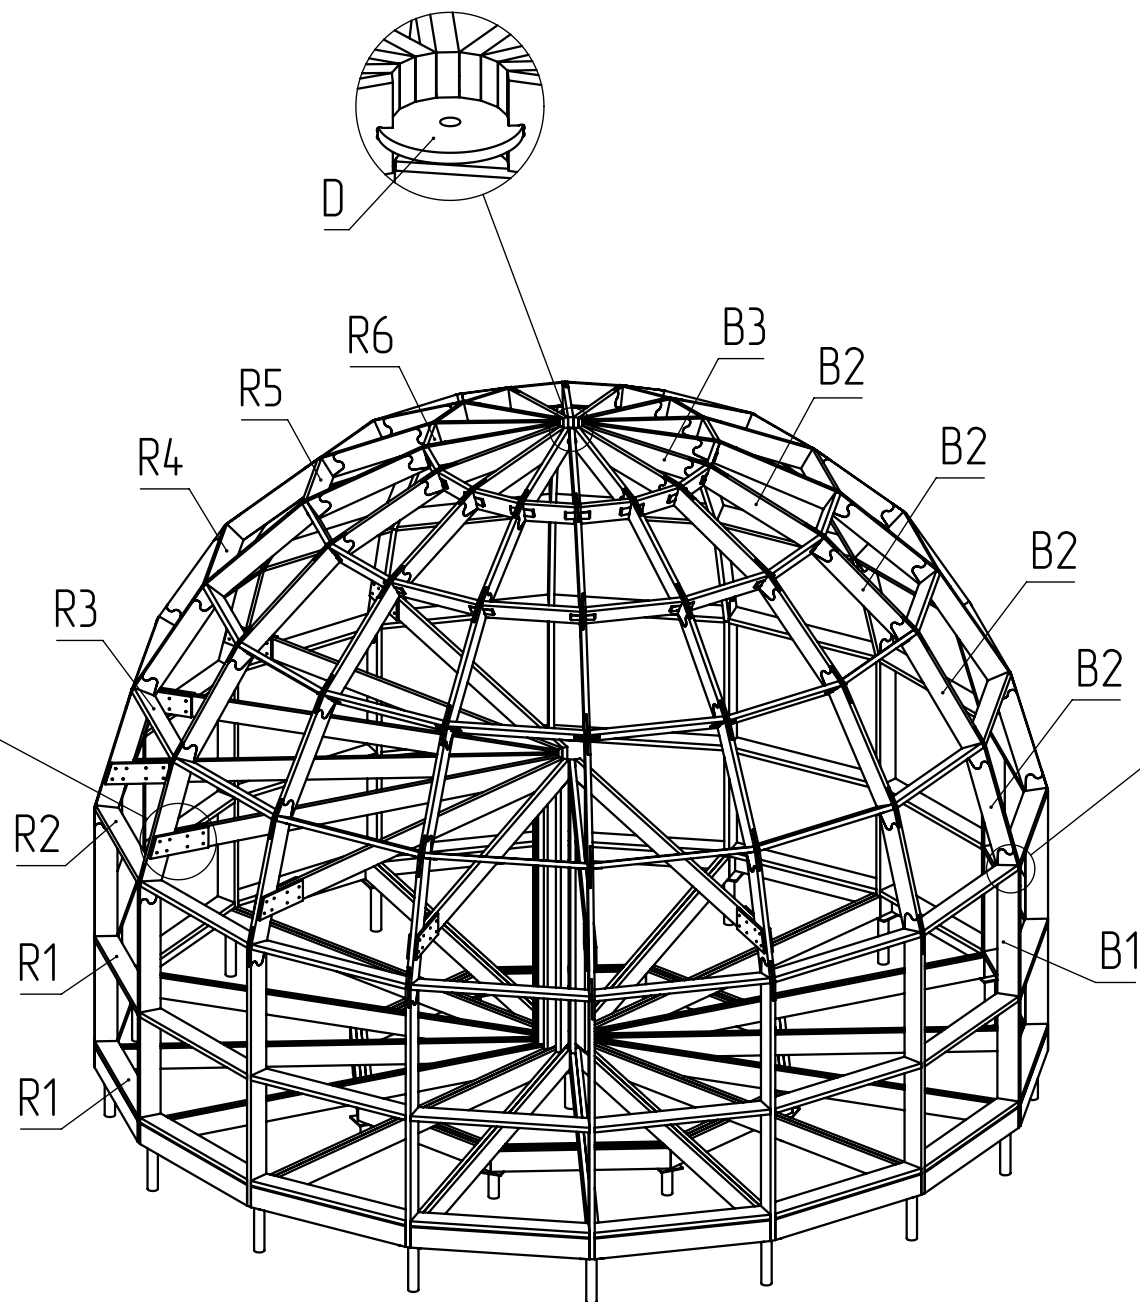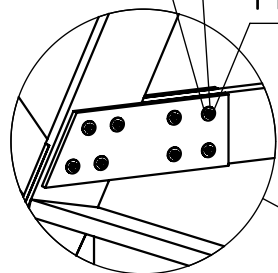

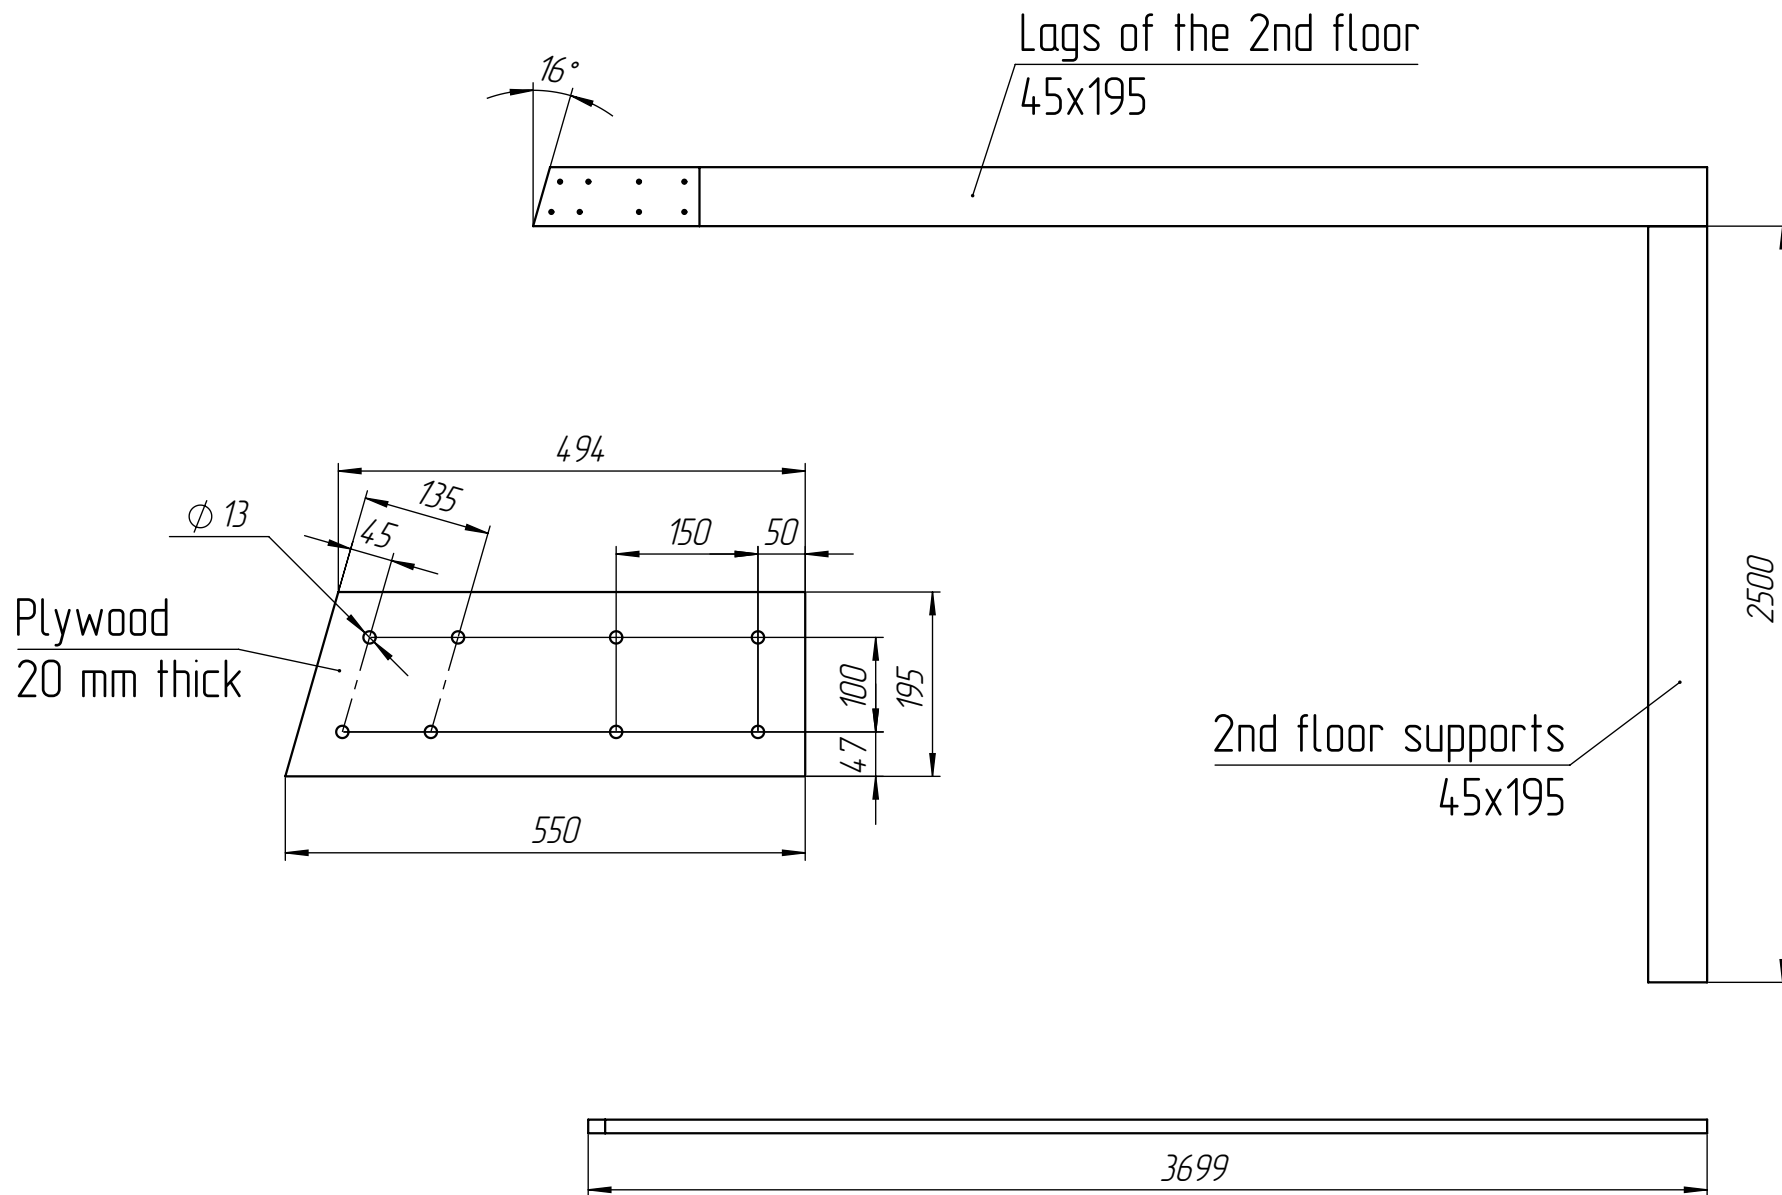


External area of the dome - 152 m<sup>2</sup>  
Area of the first floor - 46 m<sup>2</sup>  
Area of the 2nd floor - 43 m<sup>2</sup>

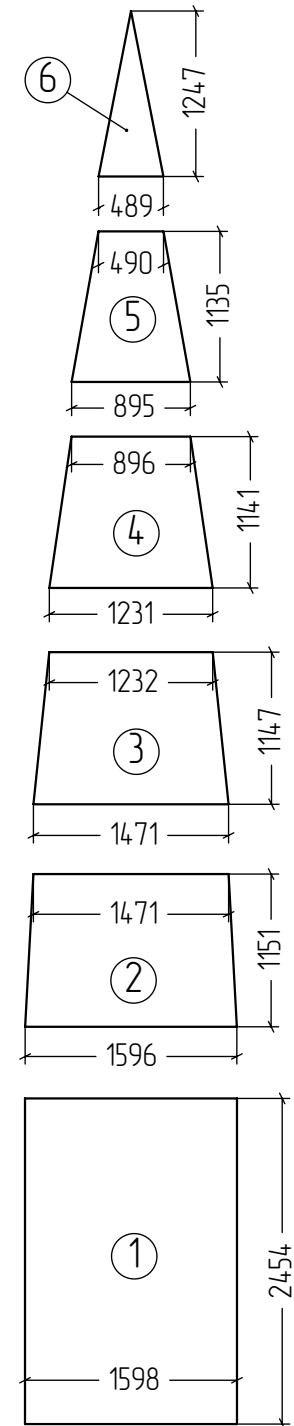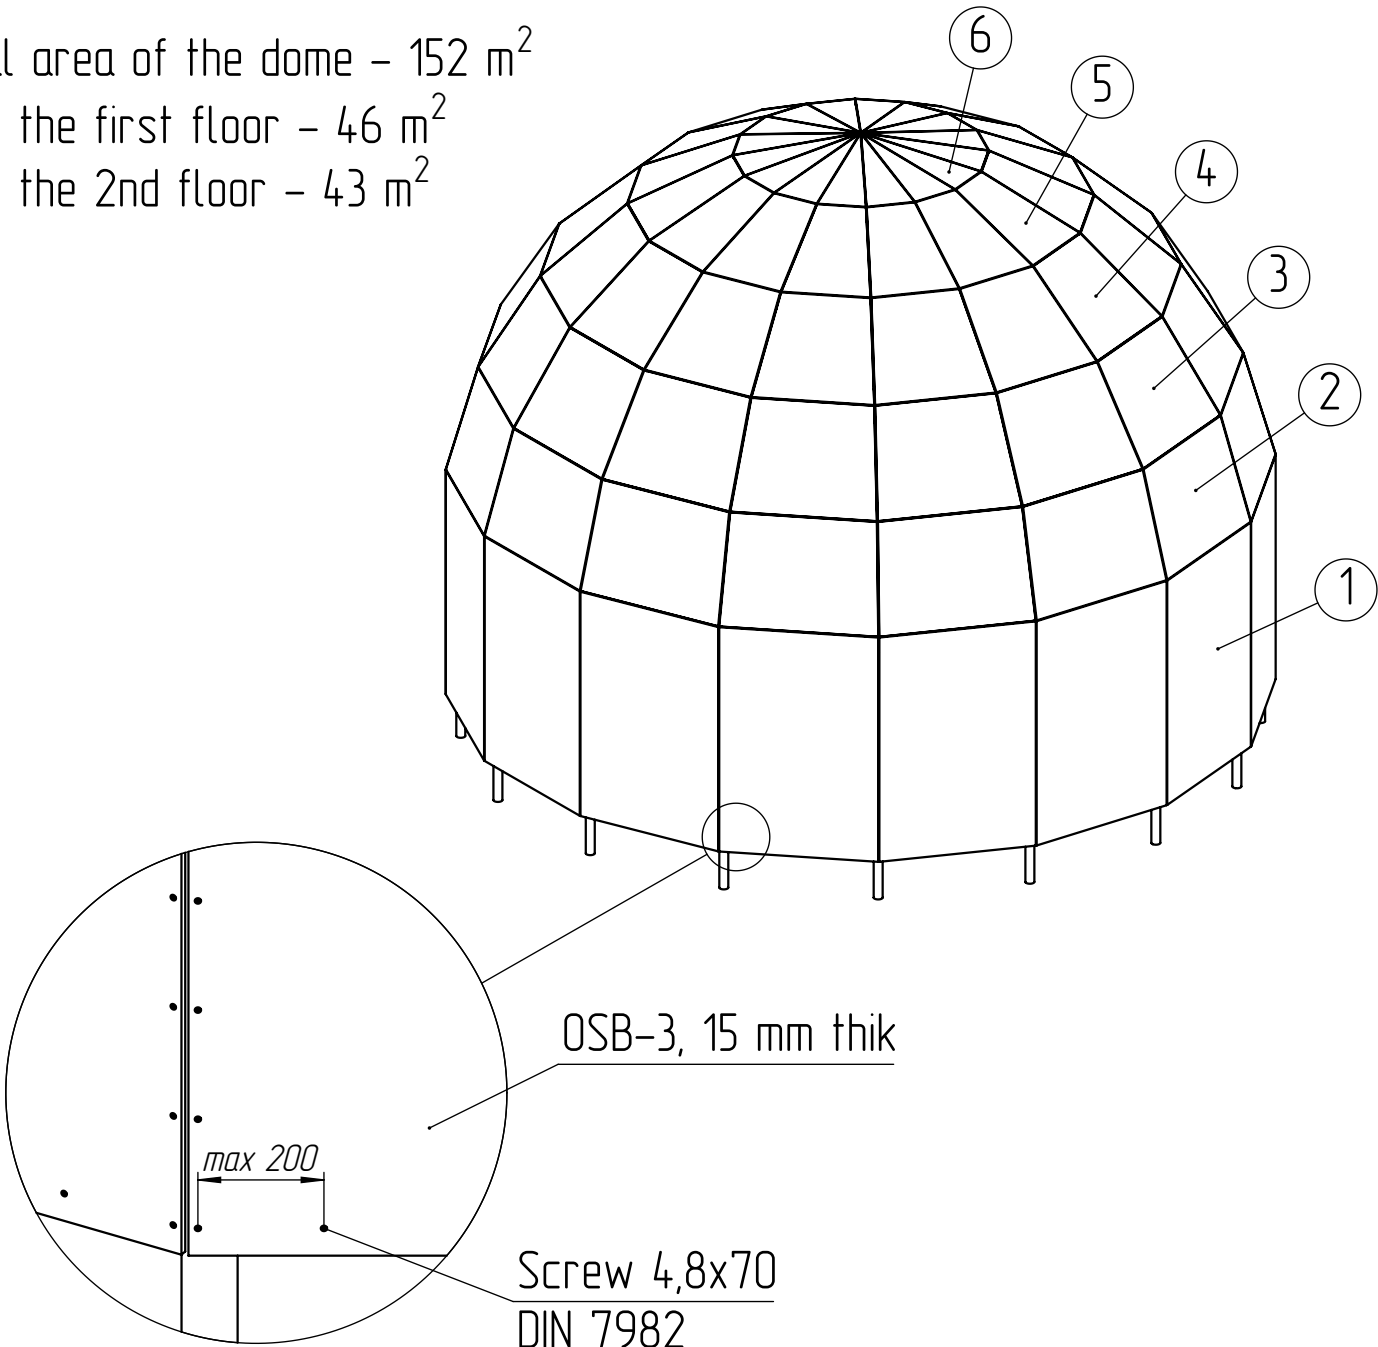





## Cutting parts from OSB-3

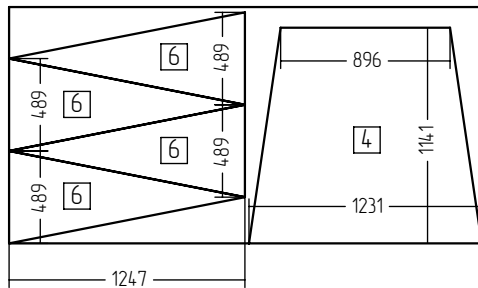


4 sheets

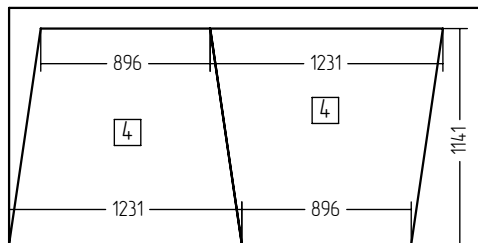

6 sheets





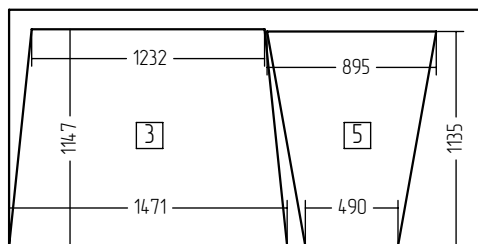


16 sheets

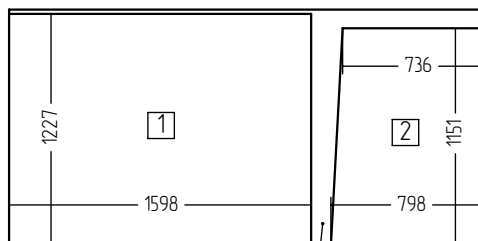


32 sheets

OSB-3, 15 mm thick

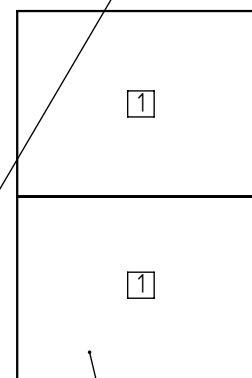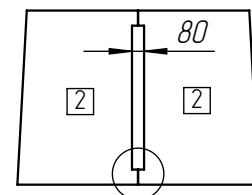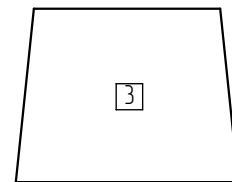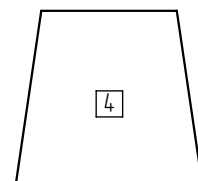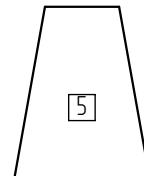

OSB-3, 15 mm thick

Screw 4,8x30  
DIN 7982

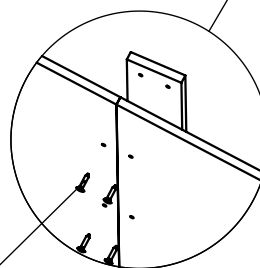

Inner area of the dome - 135 m<sup>2</sup>

